

This product, formerly sold by ams AG, and before that optionally by either Applied Sensors GmbH, acam-messelectronic GmbH or Cambridge CMOS Sensors, is now owned and sold by

# ScioSense

The technical content of this document under ams / Applied Sensors / acammesselectronic / Cambridge CMOS Sensors is still valid.

Contact information Headquarters: Sciosense B.V. High Tech Campus 10 5656 AE Eindhoven The Netherlands info@sciosense.com www.sciosense.com





Application Note: AS3933-AN02 – Demodulator/Data Slicer



**Demodulator/Data Slicer** 



# **Table of Contents**

1	General Description	3
2	Demodulator/Data Slicer	3
3	Demodulator	3
3.1	Fast Envelope Time Constant	4
3.2	Slow Envelope Time Constant	5
4	Data Slicer	5
4.1	Dynamic Threshold	5
4.2	Absolute Threshold	6
Copyrigh	t	7
Disclaime	ər	7

#### **Revision History**

Revision	Date	Owner	Description
1.0	15.10.2012	JRY	Description Data Slicer

AS3933-AN02 Demodulator/Data Slicer



### **1** General Description


This application note describes the demodulator and data slicer blocks of the AS3933 and how to set them up. Specifically, the dynamic threshold and absolute threshold will be looked at in more detail.

## 2 Demodulator/Data Slicer

After the channel selector decides on the channel amplifier with highest RSSI, it connects that channel to the demodulator. The demodulator returns the signal to base-band and, furthermore, extracts two signals. The first one is a fast envelope of the base-band signal, which will be used to recover the digital information. The second signal is a slow envelope of the incoming bit stream, i.e. the time constant of the circuit is bigger than the time constant of the circuit for the fast envelope. The slow envelope therefore represents an average value of the incoming bit stream. Those two signals are then fed to the data slicer. There the two signals are compared, with the slow envelope used as trigger threshold. A block diagram of this circuit is shown in figure 1.

#### Figure 1:

#### Concept Block Diagram of the Demodulator and Data Slicer

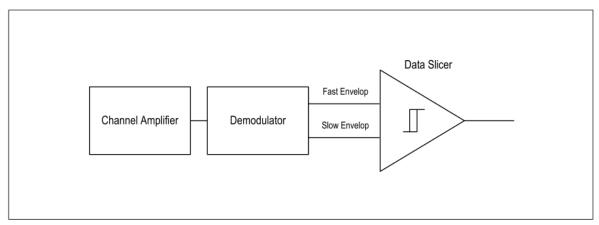


## 3 Demodulator

The output of the demodulator consists of two signals. A representation of the input signal and the output of the demodulator are illustrated in figure 2.



#### Figure 2:

#### **Fast and Slow Envelope Signals**

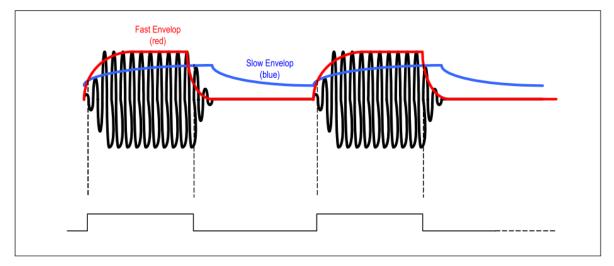

## 3.1 Fast Envelope Time Constant

The time constants of the demodulator need to be adjusted according to the bit rate and preamble length to optimize its performance. If the bit rate increases, the time constant for the fast envelope needs to decrease. The time constant for the fast envelope can be set in register R3<2:0>. The recommended settings for different data rates, as they are given in the data sheet on page 26, can be seen in figure 3. For smaller time constants the higher noise that is injected needs to be considered.

#### Figure 3:

R3<2>	R3<1>	R3<0>	Symbol Rate [Manchester symbol/s]
0	0	0	4096
0	0	1	2184
0	1	0	1490
0	1	1	1130
1	0	0	910
1	0	1	762
1	1	0	655
1	1	1	512

#### Bit Setup of the Fast Envelope's Time Constant for Different Symbol Rates



# 3.2 Slow Envelope Time Constant

The slow envelope can be optimized to improve the noise immunity of the data slicer. The deciding factor here is the preamble length. Increasing the noise immunity of the data slicer, which is equivalent to increasing the slow envelope's time constant in case the dynamic threshold is used, means that the preamble has to be made longer. The correlation between the slow envelope's time constant and the minimum preamble length is given in figure 4. The times for the preamble length are minimum required values. It is recommended to prolong the preamble. These values are taken from table 21 in the data sheet.

#### Figure 4:

R3<5>	R3<4>	R3<3>	Minimum Preamble Length [ms]
0	0	0	0.8
0	0	1	1.15
0	1	0	1.55
0	1	1	1.9
1	0	0	2.3
1	0	1	2.65
1	1	0	3
1	1	1	3.5

#### Minimum Preamble Length for Different Slow Envelope Time Constants

The preamble is a series of alternating zeros and ones which separates the data from the carrier burst. Prolonging the preamble gives the slow envelope more time to settle at a center voltage value before the data bits come in.

## 4 Data Slicer

# 4.1 Dynamic Threshold

The outputs of the demodulator, the fast and slow envelopes, are further processed by the data slicer. The data slicer uses the voltage level of the slow envelope as trigger level. Each time the fast envelope signal crosses the slow envelope, the comparator triggers. With register R3<7:6> the comparator's hysteresis can be controlled. The settings are shown in figure 5.

#### Figure 5:

#### **Comparator Hysteresis Settings**

R3<7>	R3<6>	Hysteresis Setting
0	0	40mV, both edges
0	1	40mV, only positive edges
1	0	20mV, both edges
1	1	20mV, only positive edges

AS3933-AN02 Demodulator/Data Slicer




The bit pattern that is created in this way will then represent the desired signal. The output of the data slicer in relation to its input is shown in figure 2.

# 4.2 Absolute Threshold

In case the incoming signal has a duty cycle far away from 50%, the slow envelope will not work very well as trigger level. The slow envelope represents an average value of the demodulated signal. If the duty cycle is too far away from 50%, the slow envelope's voltage level will be either too high or too low, but not in the center of the signal range where it is supposed to be. Therefore, an absolute threshold for the data slicer can be enabled with bit R1<7>. Setting this bit 'high' will automatically deactivate the dynamic threshold. Respectively, the bits in register R3<5:3>, which control the preamble length, will no longer influence the data slicer's noise immunity. The preamble length can be therefore set to its minimum value.

The voltage level of the absolute threshold is set to the middle of the demodulator's output dynamic range. The absolute threshold level can be reduced by setting bit R2<7> to 'high' in case the environment is not noisy.

#### Figure 6:

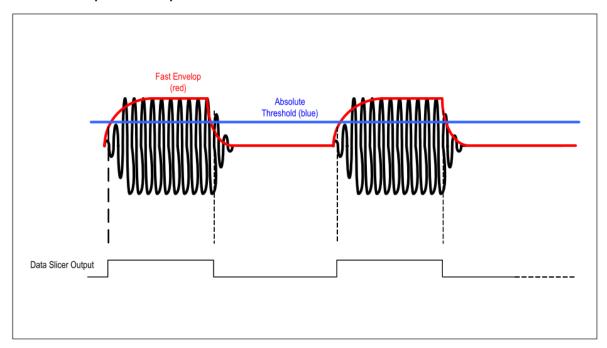

#### Data Slicer Input and Output with an Absolute Threshold

AS3933-AN02 Demodulator/Data Slicer



# Copyright

Copyright © 1997-2012, ams AG, Tobelbader Strasse 30, 8141 Unterpremstaetten, Austria-Europe. Trademarks Registered ®. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

All products and companies mentioned are trademarks or registered trademarks of their respective companies.

# Disclaimer

Devices sold by ams AG are covered by the warranty and patent indemnification provisions appearing in its Term of Sale. ams AG makes no warranty, express, statutory, implied, or by description regarding the information set forth herein or regarding the freedom of the described devices from patent infringement. ams AG reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with ams AG for current information.

This product is intended for use in normal commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or lifesustaining equipment are specifically not recommended without additional processing by ams AG for each application. For shipments of less than 100 parts the manufacturing flow might show deviations from the standard production flow, such as test flow or test location.

The information furnished here by ams AG is believed to be correct and accurate. However, ams AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of ams AG rendering of technical or other services.

# **Contact Information**

#### Headquarters

ams AG Tobelbader Strasse 30 8141 Unterpremstaetten Austria T. +43 (0) 3136 500 0 For Sales Offices, Distributors and Representatives, please visit: http://www.ams.com/contact